



2700 SERIES N95 DISPOSABLE RESPIRATOR W/ HANDYSTRAP® AND VENTEX® VALVE

HANGS LOOSE

HandyStrap allows mask to conveniently hang down around the user's neck. You'll find it's a convenient place to keep it when you're not using it. And during wear the elastic cloth strap feels comfortable and cool.

DURA-MESH® SHELL LASTS LONGER

The exclusive Dura-Mesh shell protects the filter media so it stays cleaner-looking longer. The shell also resists collapsing in hot, humid environments so the respirator holds its shape longer. The result is fewer respirators used and lower costs.

SOFT FOAM NOSE CUSHION

Easier to wear and more all-day comfort for the majority of the work force. Contoured nose bridge with a soft foam nose cushion for comfortable seal. No metal noseband to adjust.

VENT HOT AIR, STAY COOLER

Exclusive Ventex valve lets the hot air out faster so breathing resistance is reduced and workers stay cooler.

FEATURES

- HandyStrap with buckle, allows mask to hang down around the user's neck when not in use.
- Cloth HandyStrap feels cool and comfortable.
- Facepiece is naturally contoured without pressure points.
- Soft foam nose cushion for added comfort and no pressure points.
- Exclusive Dura-Mesh shell resists collapsing in heat and humidity.
- Softspun® lining for increased comfort and durability.
- Available in three sizes, for most workers and OSHA compliance.
- Meets heat and flame resistance in accordance with ANSI/ISEA 110-2009 Section 7.11.1.
- 100% PVC-Free for a greener alternative.
- 100% Made in the USA

N95 APPLICATIONS


Grinding, Torch Cutting, Sanding, Metal Pouring, Sweeping, Metal Working, Bagging, Foundries, Stone Quarrying, Agriculture, Metal Machining, Construction Sites, Cement, Ceramics Manufacturing, Underground Mining, Timber/Lumber Mills, Polishing, Buffing, Lime, Poultry, Textiles, Welding, Brazing, Soldering.



2700N95



M2700N95

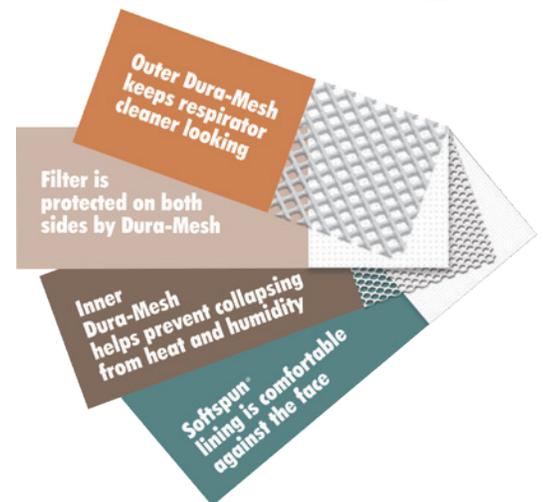



2700 SERIES N95 DISPOSABLE RESPIRATOR W/ HANDYSTRAP® AND VENTEX® VALVE



MMI-MIL2
SECTION C18
DRAFT APPROVAL LABEL



MOLDEX-METRIC, INC.
CULVER CITY, CALIFORNIA U.S.A.
800-421-0068

PART #	SIZE	VALVE TYPE	HANDYSTRAP MATERIAL	DISPLAY QUANTITY	CASE QUANTITY
2700N95	M/L	Ventex	Cloth	10/Box	10 Boxes
2701N95	S	Ventex	Cloth	10/Box	10 Boxes
2707N95	LP	Ventex	Cloth	10/Box	10 Boxes
M2700N95	M/L	Ventex	Cloth	10/Box	10 Boxes

THESE RESPIRATORS ARE APPROVED ONLY IN THE FOLLOWING CONFIGURATIONS:							
RESPIRATOR COMPONENTS							
TC-	PROTECTION ¹	RESPIRATOR					CAUTIONS & LIMITATIONS ²
		2700N95	2701N95	2707N95	M2700N95	M2701N95	
84A-0120	N95	X	X	X	X	X	A B C J M N O P

1. PROTECTION
N95- Particulate Filter (95% filter efficiency level) effective against particulate aerosols free of oil, time

2. CAUTIONS AND LIMITATIONS

A - Not for use in atmospheres containing less than 19.5 percent oxygen.
B - Not for use in atmospheres immediately dangerous to life or health.
C - Do not exceed maximum use concentrations established by regulatory standards.
J - Failure to properly use and maintain this product could result in injury or death.
M - All approved respirators shall be selected, fitted, used, maintained in accordance with MSHA, OSHA, and other applicable regulations.
N - Never substitute, modify, add, or omit parts. Use only exact replacement parts in the configurations as specified by the manufacturer.
O - Refer to User's Instructions, and/or maintenance manuals for information on use and maintenance of these respirators.
P - NIOSH does not evaluate respirators for use as surgical masks.

VENDING PACK FOR VENDING MACHINES

PART #	SIZE	DESCRIPTION	DISPLAY QUANTITY	CASE QUANTITY
2700V	M/L	Vending Pack in PVC-Free bag	2/Pack	40 Pack per case

WARNING TO USER

- Follow all instructions and warnings on the use of this respirator and wear during all times of exposure. Failure to do so will reduce respirator effectiveness, wearer protection and may result in sickness or death.
- Before use, the user must first be trained by the employer in proper respirator use, in accordance with applicable safety and health standards, for the contaminant and exposure level in the assigned work area.
- The particulates and other contaminants which can be dangerous to your health include those which you cannot see, taste, or smell.
- This product has not been sold with warnings or use instructions for personnel involved in healthcare or related situations, where there may be the possibility of contact with disease or biological hazards. If you are considering such uses, first call the Moldex Technical Service Department: +1 (800) 421-0668 or +1 (310) 837-6500 ext. 512.

LIMITED WARRANTY IMPORTANT NOTICE TO PURCHASER

This limited warranty is made in lieu of the warranties of merchantability, fitness for particular purposes and all other warranties, express or implied. There are no other warranties which extend beyond the description on the face hereof. The physical standards and specifications of Moldex will be met by products sold. Exclusive Remedies: damages for the breach of this limited warranty are limited to the replacement of such quantity of Moldex, products proved to be defectively manufactured. Except as provided above, Moldex shall not be liable or responsible for any loss, damage, or liability, direct, indirect, incidental, special, or consequential, arising out of sale, use, or misuse, or the inability to use products by the user.

MOLDEX TECHNICAL ASSISTANCE

Moldex provides all of the technical assistance required to set up a hearing protection program. For more information call +1 (800) 421-0668 or +1 (310) 837-6500 ext. 512 or email: tech@moldex.com or visit www.moldex.com.

USE AGAINST:

- Particulate aerosols free of oil.

DO NOT USE AGAINST:

- Concentrations of contaminants which are unknown, or are immediately dangerous to life or health.
- Concentrations of particulates which exceed the maximum use concentration or 10 times the OSHA Permissible Exposure Limit, whichever is lower.
- Gases, vapors, asbestos, paint spray, sandblasting or particulate materials which generate harmful vapors.
- Oil-based mists.

RESTRICTIONS:

- This respirator does not supply oxygen and must not be used in atmospheres containing less than 19.5% oxygen.
- Do not remain in contaminated area if any physical distress occurs, for example breathing difficulty, dizziness or nausea.
- Leave contaminated area and replace respirator if it is damaged, distorted, a proper fit can not be obtained or breathing becomes difficult.
- Prior to each use, carefully inspect the entire respirator, including filter media and strap/weld attachment area for tears and damage. Staple or strap/weld attachment perforations do not affect respirator performance.
- Do not alter, modify, or abuse this respirator.
- Store unused respirators in box/bag in a clean, dry, non-contaminated area.
- Dispose of respirator according to your employer's policy and local regulations.
- Dispose no later than thirty days after first use.
- Use respirator before the "use by" expiration date printed on box/bag.
- If used for welding, wear appropriate eye and face protection.

MOLDEX-METRIC, INC.

10111 Jefferson Blvd.
Culver City, CA 90232
TEL: +1 (800) 421-0668 or +1 (310) 837-6500
FAX: +1 (310) 837-9563
E-mail: sales@moldex.com | www.moldex.com

US & CANADA CUSTOMER SERVICE

TEL: +1 (800) 421-0668, Ext. 550
FAX: +1 (310) 837-9563

